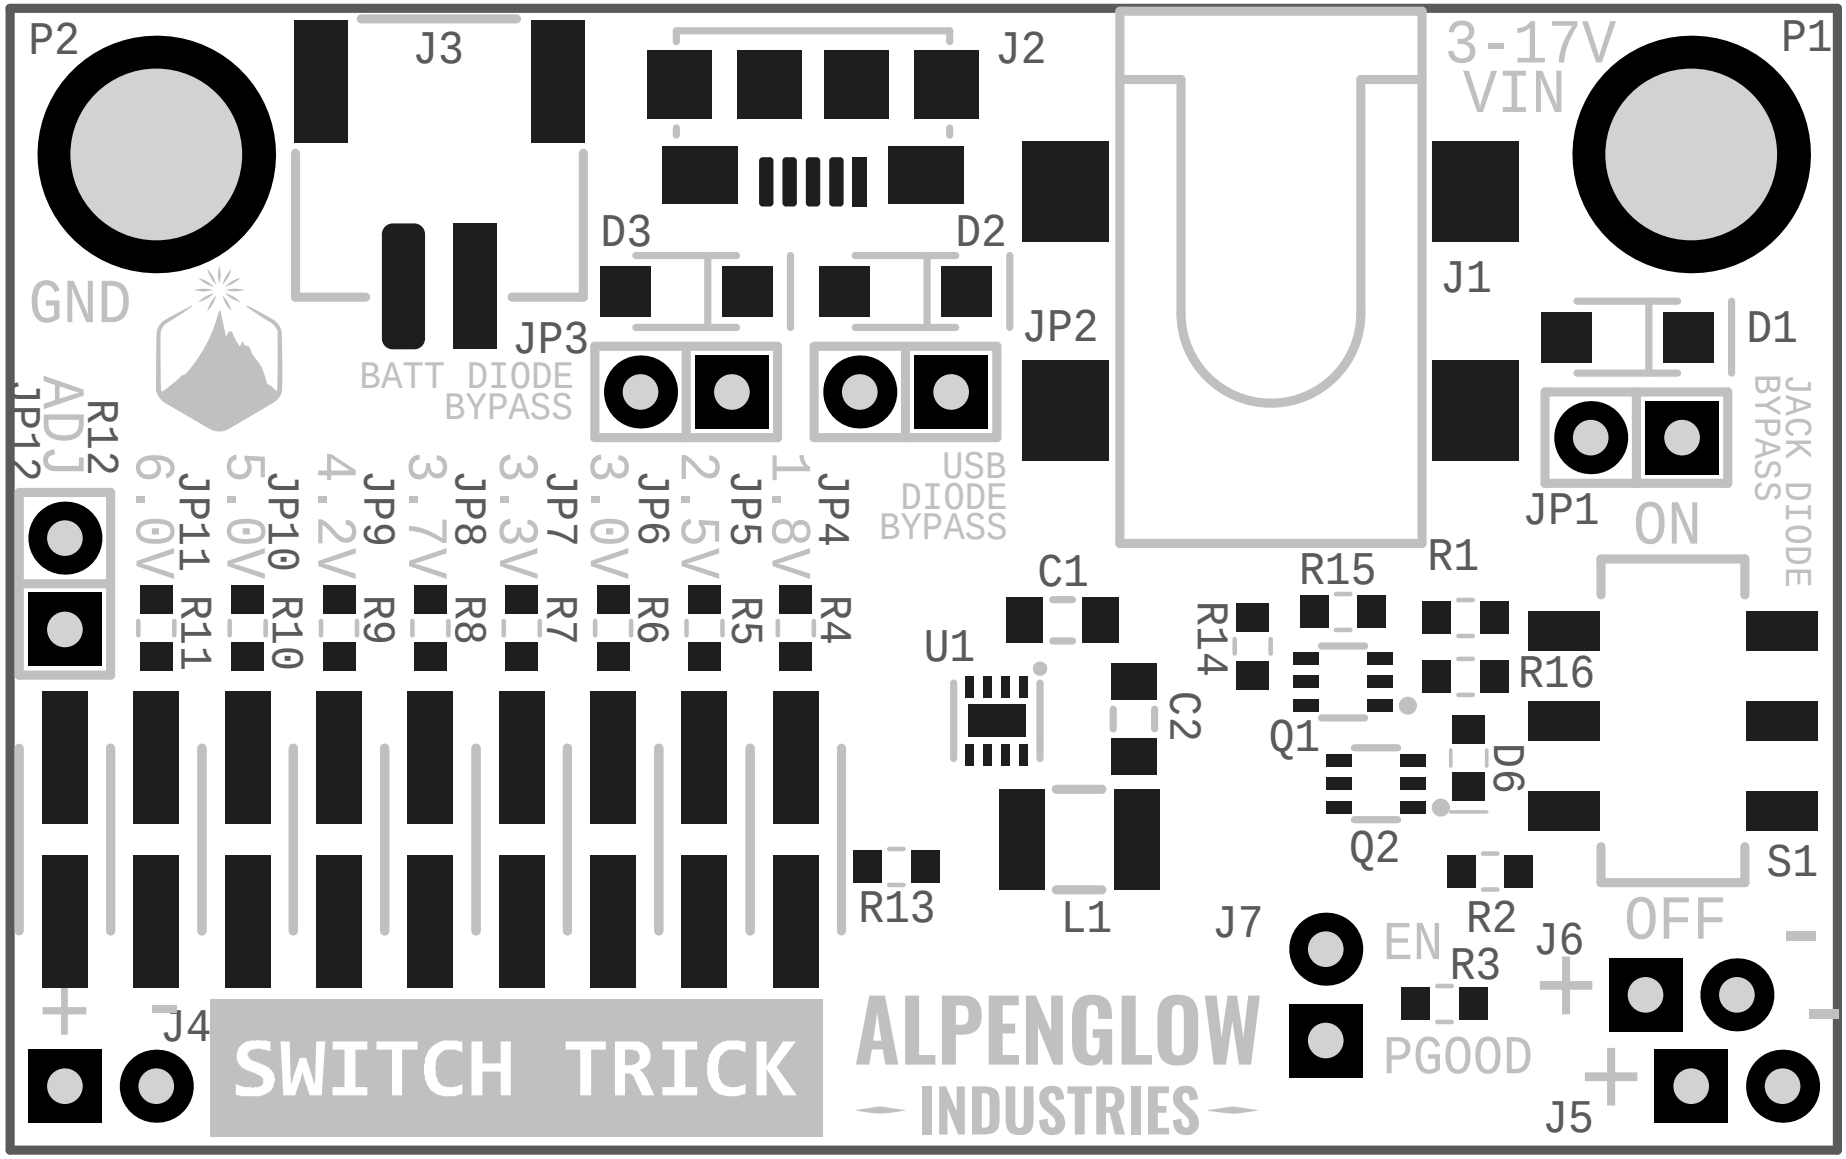

Note that J4, J5 (or J6), J7 should be soldered on the bottom.
J6 is optional instead of J5, if your breadboard's power rails are a little off.
J7 is optional for routing enable and power good to your breadboard.
www.alpenglowindustries.com/switchtrick